


Benefit from
our strength.
Use our
intelligent
chemical
solutions as
the key of
added value
through
improved
performance

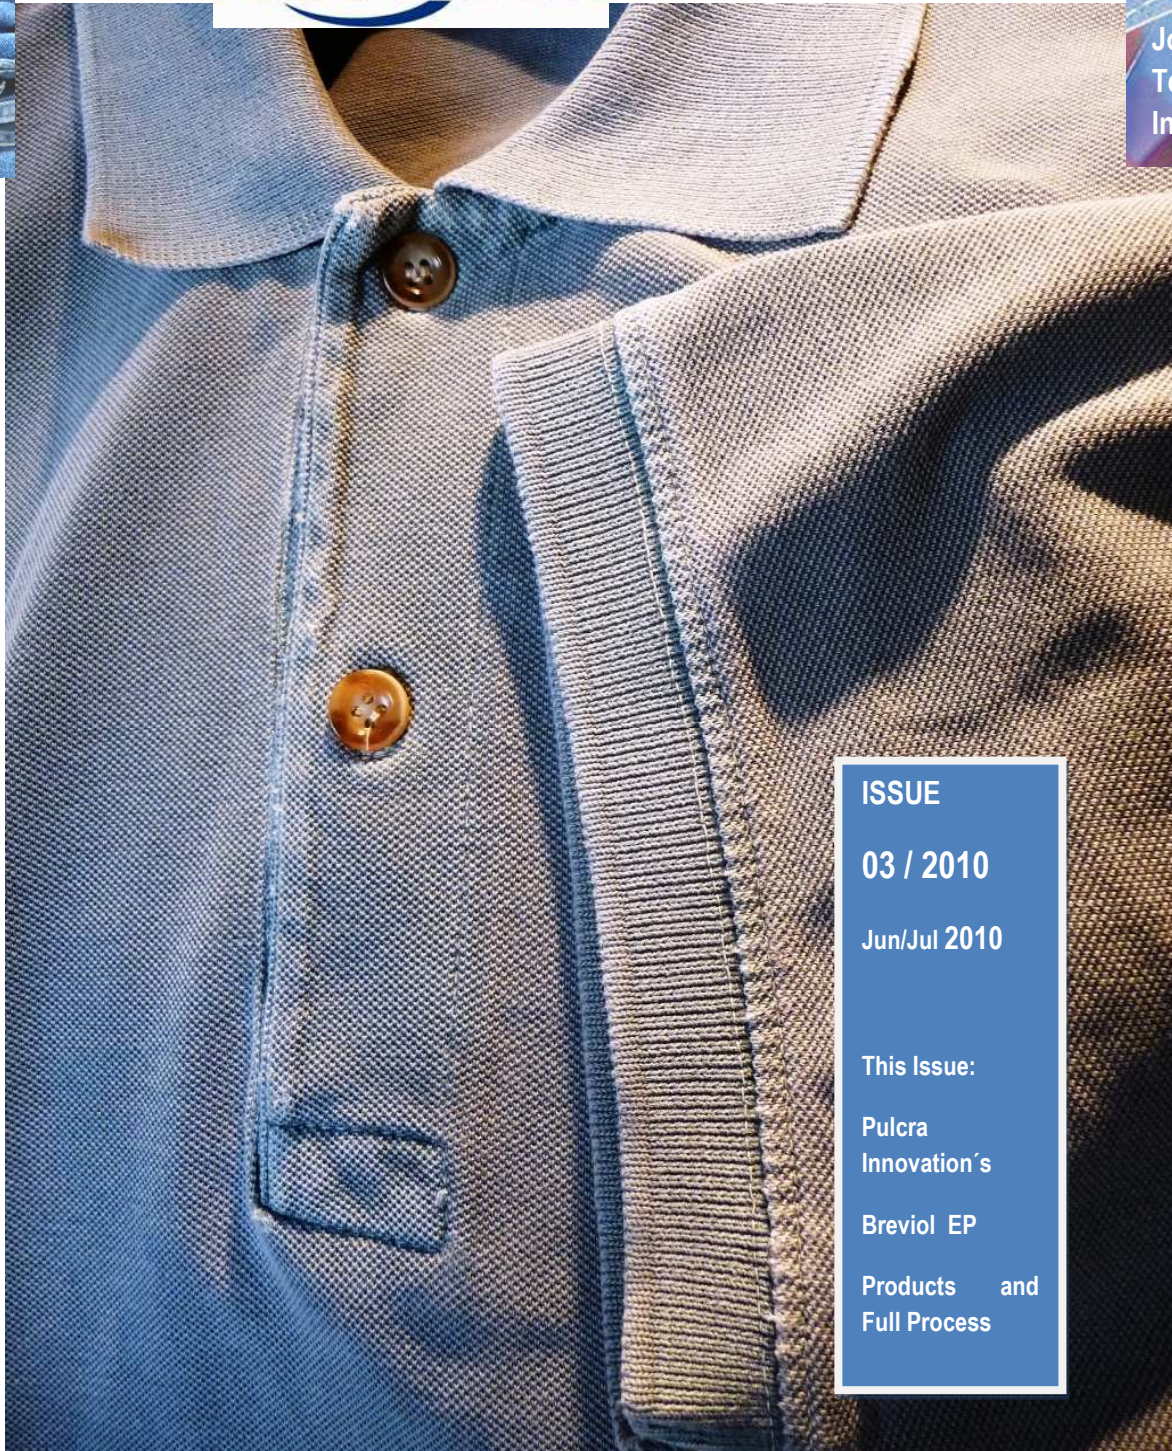

Recipe

Pre-Wash: 0,5 g/l Foryl All-In + 1g/l NaOH + 2g/l H2O2 ; 20' at 80°C

Rinsing and neutralizing

Dyeing: 2 – 4% BREVIOL EP + x% pigment; 20' at 60°C

Enzyme-Wash: 1% Forylase SW-GR + Miltopan GB or perlite (optional); 40-60' at 55°C

Softening: 3% Belfasin OET Liq 10' at 40°C

ISSUE

03 / 2010

Jun/Jul 2010

This Issue:

Pulcra
Innovation's

Breviol EP

Products and
Full Process